

click 'n clock[©]



The click 'n clock boxes are designed to be used in any 12 chamber T2 or T3 clock. It will convert your T2 or T3 in a few moments into a thimbleless clock.

Before you start:

Make sure your drum goes around smoothly.

If it doesn't run smoothly already, it will not get better once the click 'n clock boxes have been installed!

Important remarks:

Thimbleless clocking is different from clocking with thimbles. When you enter the rubber race ring in the clock, make sure the ring is completely in the box. If it is not completely down, the risk exists that the ring will get stuck in the drum!

If you think your clock needs service prior to inserting the click 'n clock boxes, or if you are having problems inserting the click 'n clock boxes, please send your clock to one of our points of sale.

Warning!

The use of the click 'n clock boxes is at your own risk. We cannot be held responsible for any loss or damage caused by the use of the click 'n clock boxes.

www.pigeonclocks.com

Step 1.


Make sure your drum holes are empty and clean.

If the drum is not empty, the click 'n clock box will not fit!

Step 2.

Make sure the flap of the click 'n clock box is on the side of the plunger and insert one box.

If you insert the box with the flap on the wrong side, you will not be able to use the clock anymore!

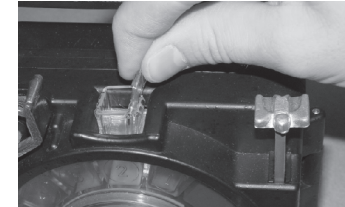

Step 3.

Take the backside of a pen and push the click 'n clock box until you hear it click.

Now push the plunger until the click 'n clock box returns and see if it opens well. If so, you can now repeat step 3 until there is a click 'n clock box in every hole.

